



1. Remove the Adjustable Glide/Stopper

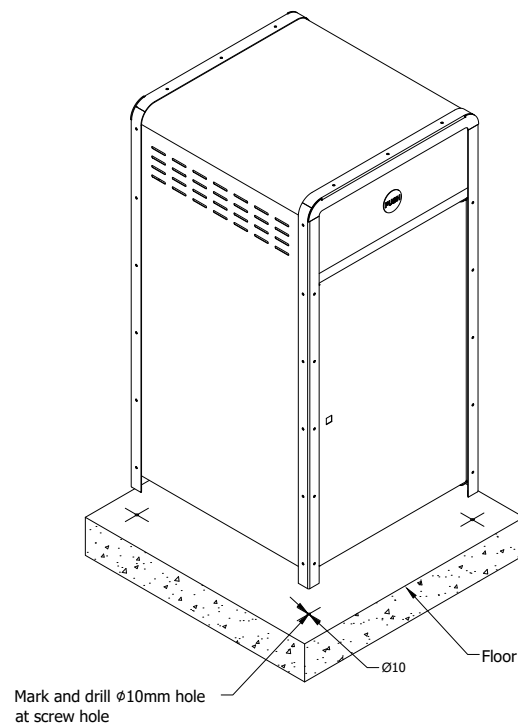

2. Mark all the bin screw hole on the cement and drill a hole. Make mark each unit separately.

3. Remove the bin and start to drill the hole. insert the M8 x 90mm wedge anchor to the floor hole.

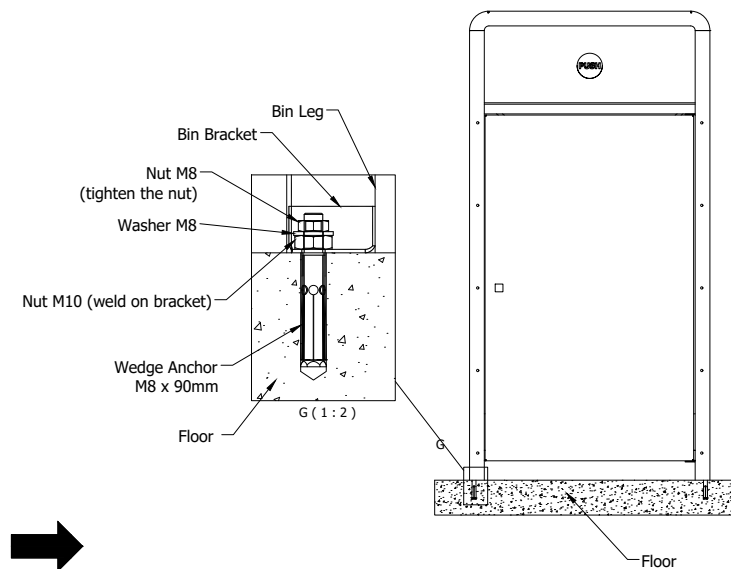

4. Tight the bin together with the washer and nut. Then the bins is secured mounted to the ground.